





How to Calibrate and Clean
your EcoScan scanners

Calibrating the EcoScan Scanner


1. After the scanner drivers are installed, please go to Control Panel

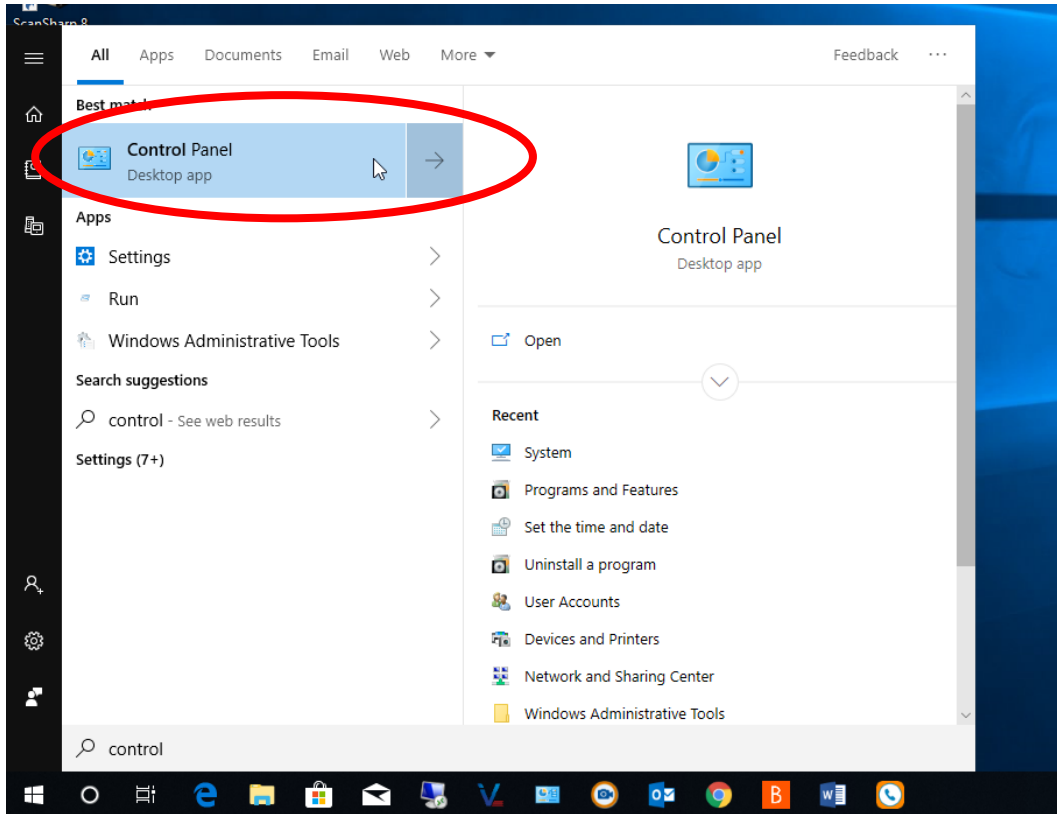


2. Click on "View devices and printers"

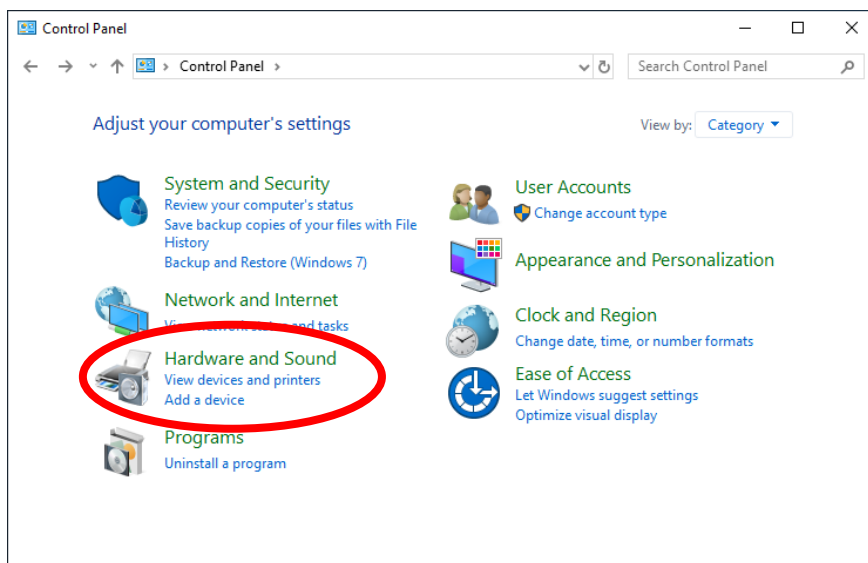

3. Right-Click the EcoScan ixx scanner and select “Scan Properties”

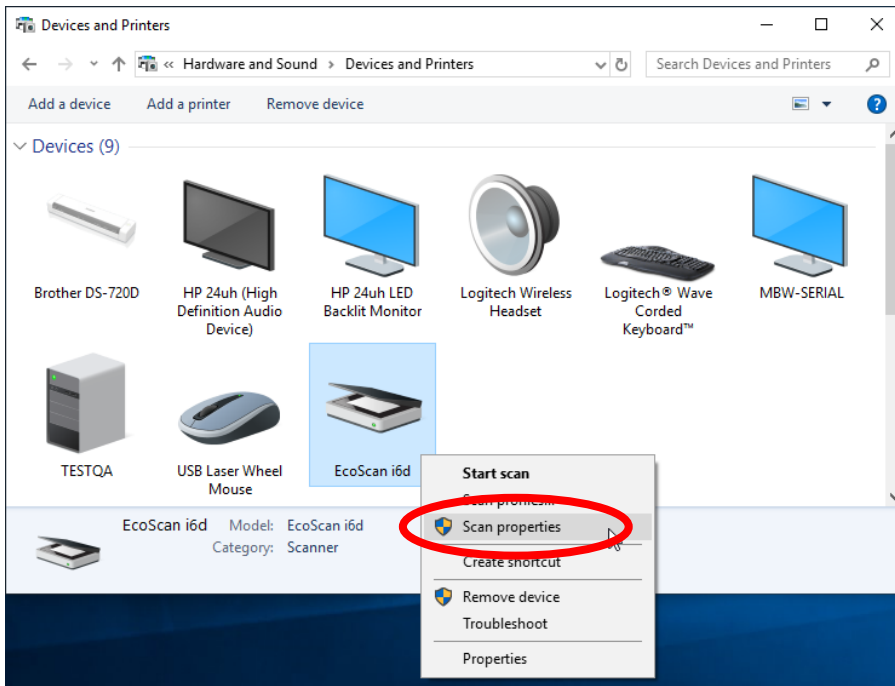


4. Go to the “Advanced” tab and select the Calibrate button. The Calibrate dialog box opens.

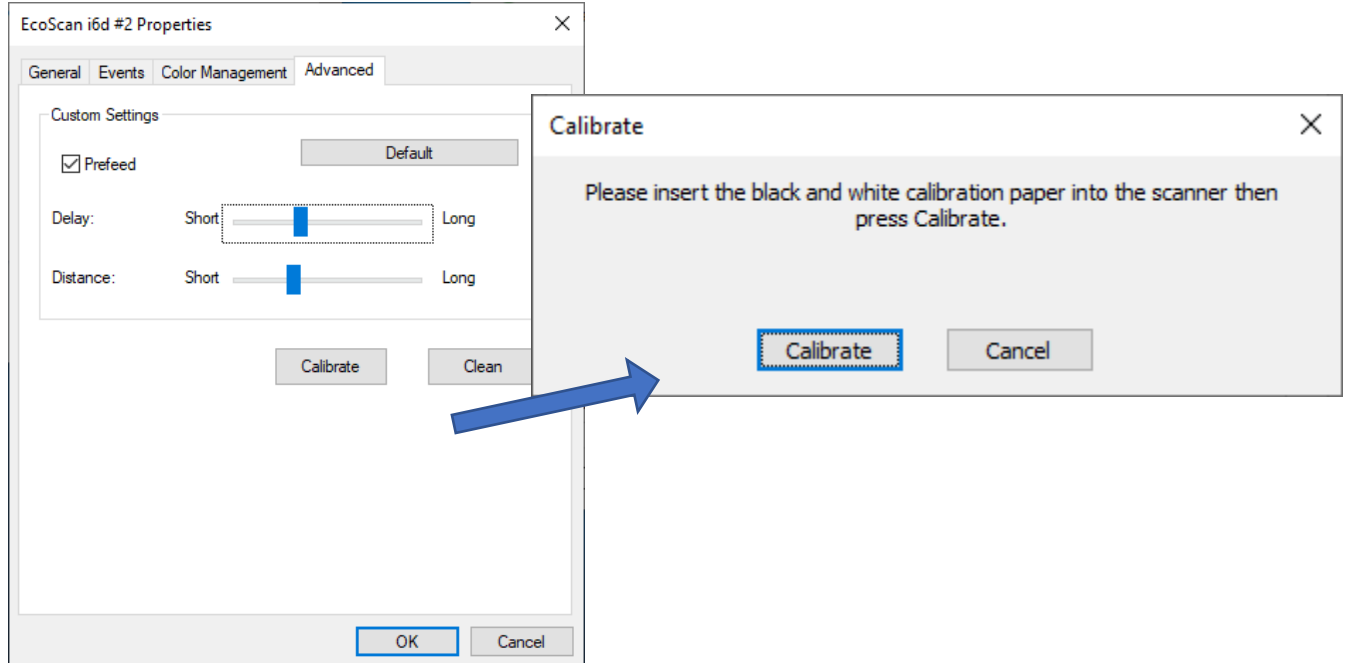

5. Grab the calibration paper that's included in the packaging of the scanner and insert the arrows in first until a slight grab secures the paper.




6. Click on Calibrate and the calibration process will begin.

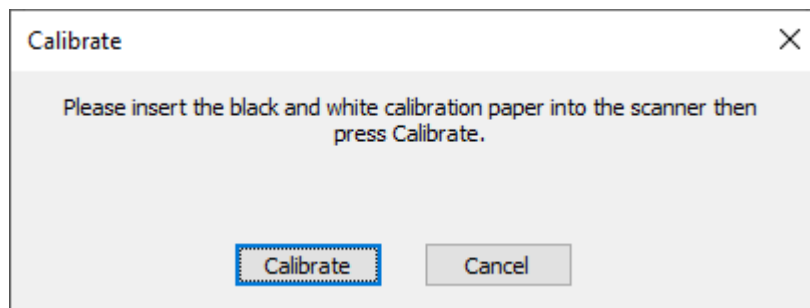


Note: The calibration process will behave in a forward and backward motions. This is normal.

7. Once the calibration process completes, you'll get a "Calibration was successful" box. Remove the calibration paper and select OK and you're done!

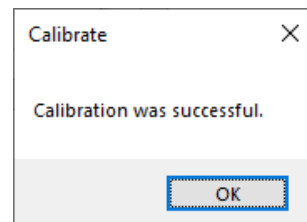


Cleaning the EcoScan Scanner


1. After the scanner drivers are installed, please go to Control Panel

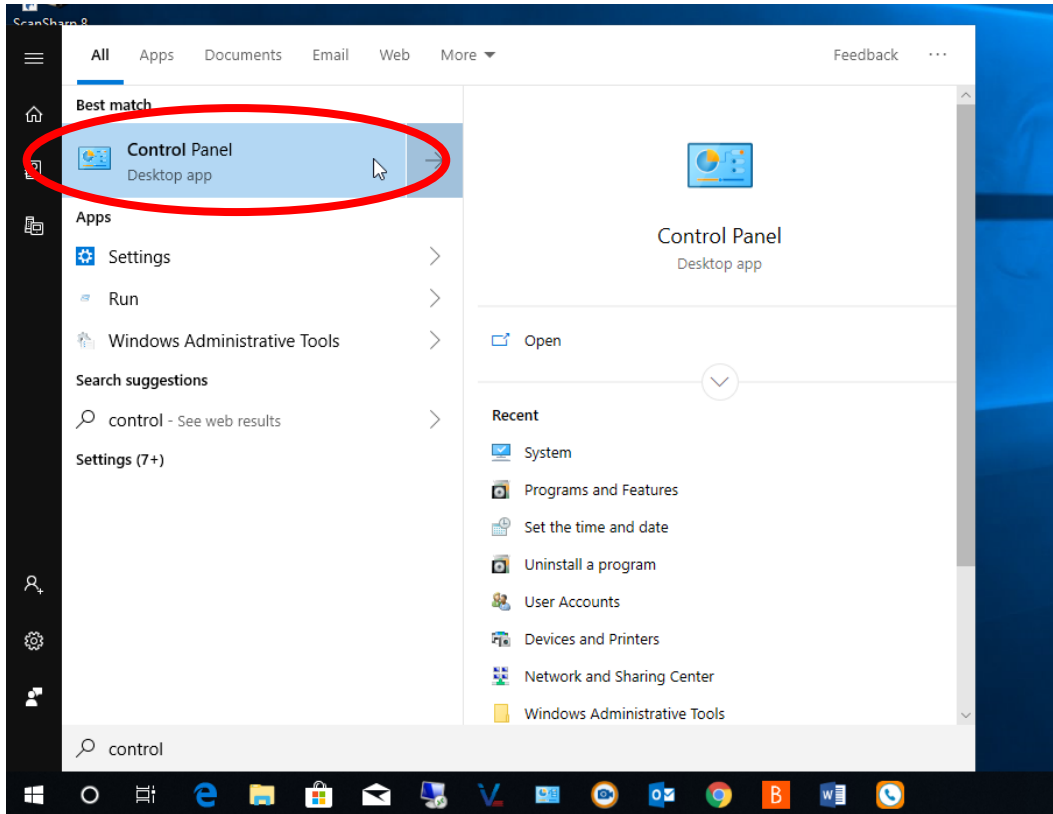


2. Click on "View devices and printers"

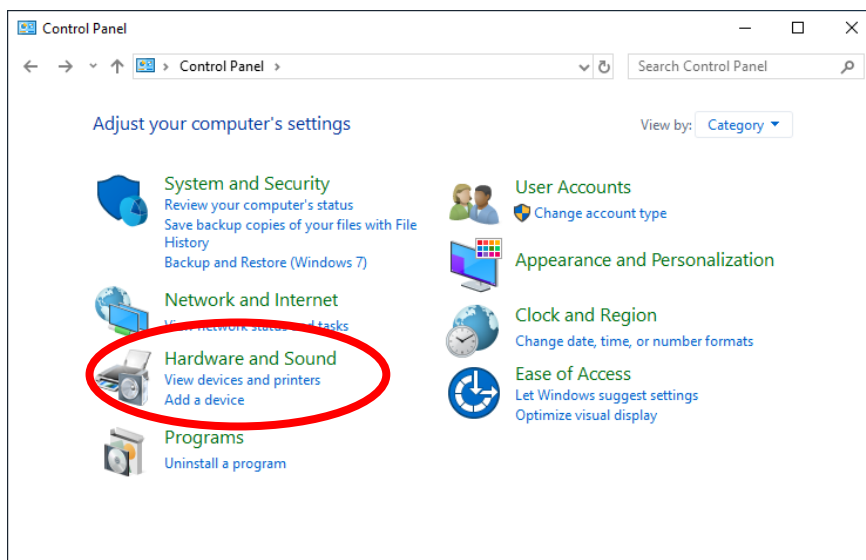

3. Right-Click the EcoScan ixx scanner and select “Scan Properties”

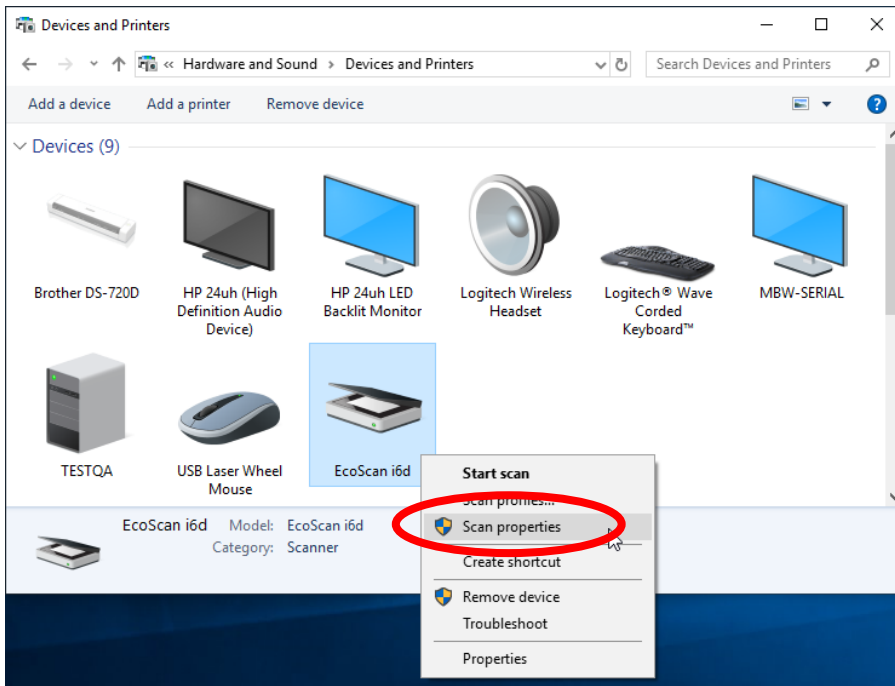


4. Go to the “Advanced” tab and select the Clean button. The Clean dialog box opens.

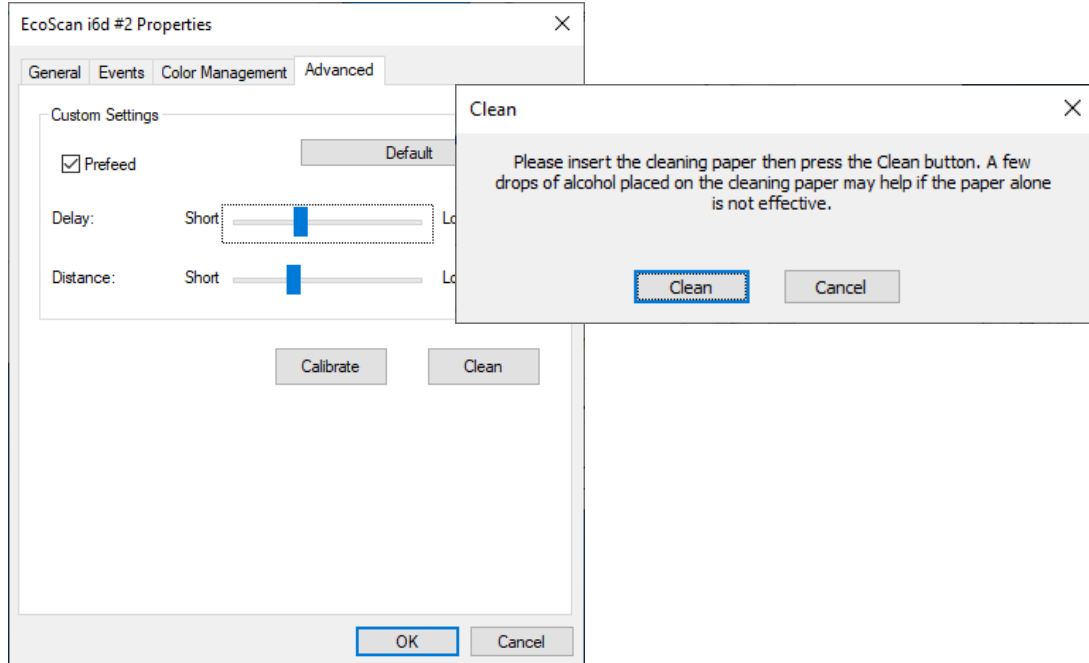


5. Grab the cleaning sheet that's included in the packaging of the scanner insert it into the scanner until it slightly grabs.



Note: For best results, apply 99% isopropyl alcohol to the leading edge of the sheet before cleaning

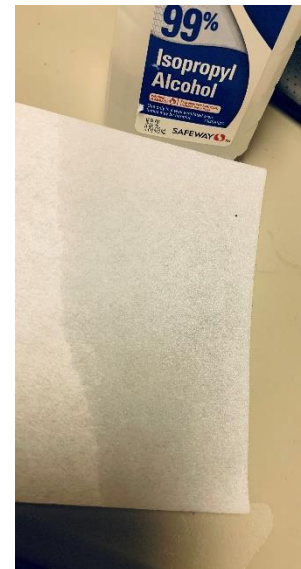

6. Click on Clean to start the cleaning process

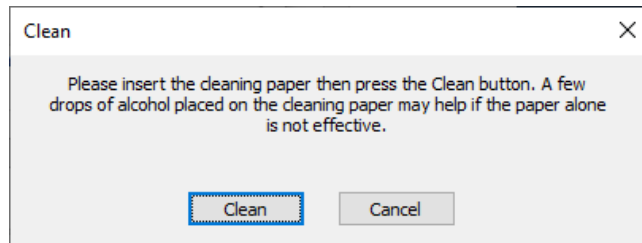

7. Once the cleaning process completes. Select OK. You're ready to scan!